


Audi A6

Current Flow Diagram

No. 18 / 1
Edition 02.2000


Headlight washer system
From model year 2000

Fuse box

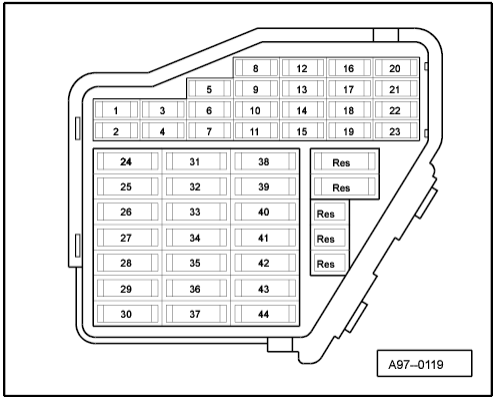

From fuse number 23 upwards the fuses in the fuse box are designated as 223 etc. in the Current Flow Diagram.

Micro-central electrics

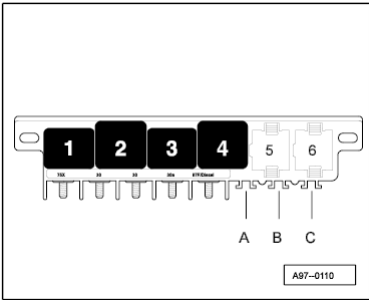


- Position of relays:
- 5 - Automatic intermittent wash/wipe relay (J31)
 - 6 - Automatic intermittent wash/wipe relay (J31)

- Fuse colours:
- 30 A - green
 - 25 A - white
 - 20 A - yellow
 - 15 A - blue
 - 10 A - red
 - 7.5 A - brown
 - 5 A - beige

Audi A6

Current Flow Diagram

No. 18 / 2

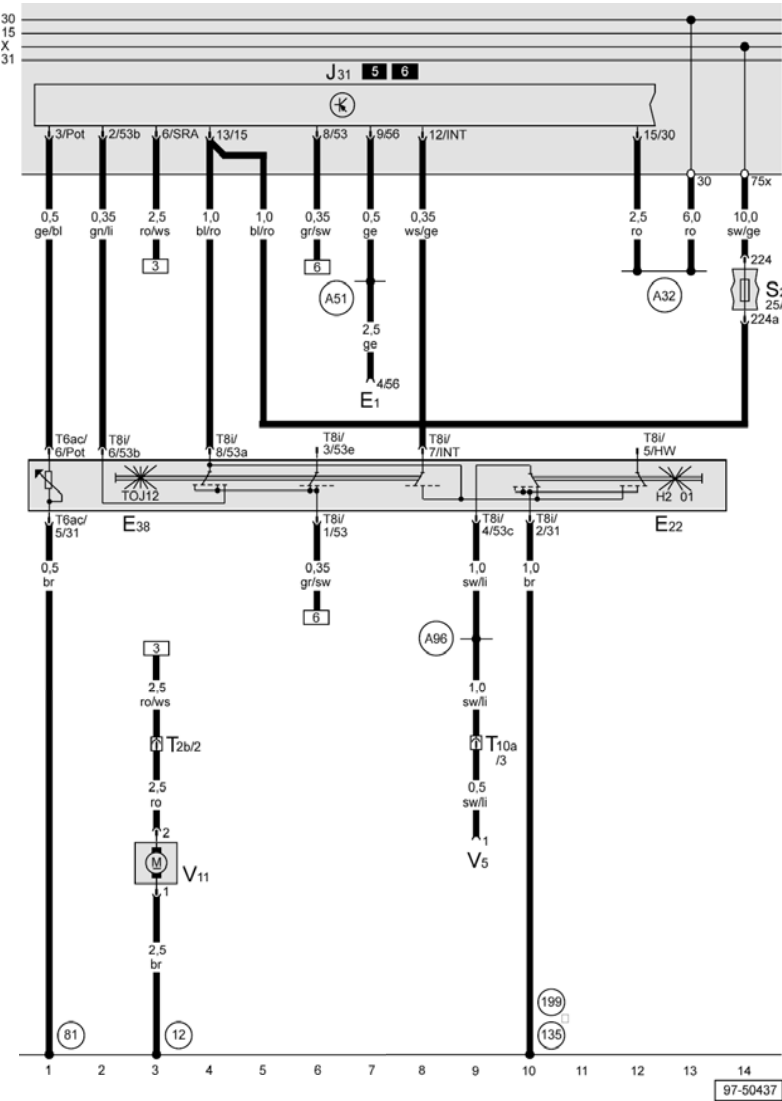

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink

- Headlight washer system**
- E1 - Lighting switch
 - E22 - Intermittent wiper switch
 - E38 - Intermittent wiper control
 - J31 - Automatic intermittent wash/wipe relay
 - S224 - Fuse in fuse box
 - T2b - 2-pin connector, black, connector point, left A pillar
 - T6ac - 6-pin connector, brown, on intermittent wiper control
 - T8i - 8-pin connector, at wiper switch
 - T10a - 10-pin connector, pink, connector point, A pillar, left
 - V5 - Windscreen washer pump
 - V11 - Headlight washer system pump
 - 12 - Earth point, in engine compartment, left
 - 81 - Earth connection -1-, in dash panel wiring harness
 - 135 - Earth connection -2-, in dash panel wiring harness
 - 199 - Earth connection -3-, in dash panel wiring harness
 - A32 - Positive (+) connection (30), in dash panel wiring harness
 - A51 - Connection (56), in dash panel wiring harness
 - A96 - Connection (53c), in dash panel wiring harness
 - * - Both possible